




Flip ON/OFF switch to ON position

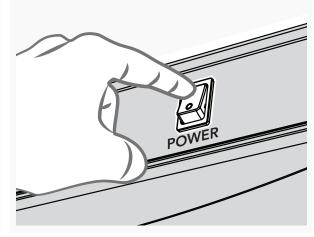


Wait 30 minutes for temperature gauge to read 150°F/66°C

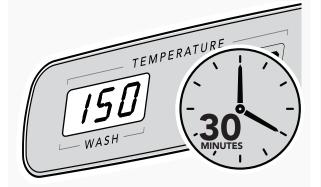


Prescrap wares and load into rack before loading rack into dishwasher.

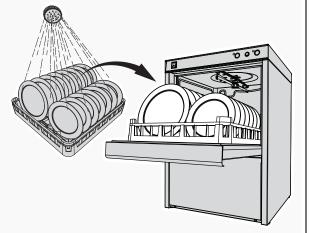

5 Press the **CYCLE** button to toggle between NORMAL, EXTRA or **HEAVY** settings to increase wash time. NORMAL is the default and indicated when no lights are lit.

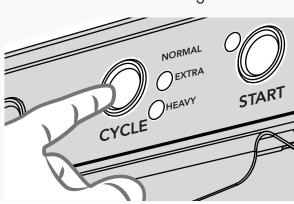

Close door, press and hold START button for 1 second and green in-cycle light will indicate the cycle has begun

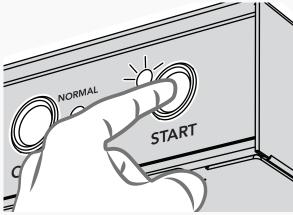

Final rinse temperature should be a minimum of 180°F/82°C during final rinse.



Wash cycle is extended if the final rinse temperature is not maintained at 180°F/82°C. Machine will begin Heat Recovery cycle after rinse cycle.



The cycle is completed when the green light is no longer lit.

You may now remove your clean wares.

Exercise caution handling wares as they may be hot.