


# CLEANING INSTRUCTIONS

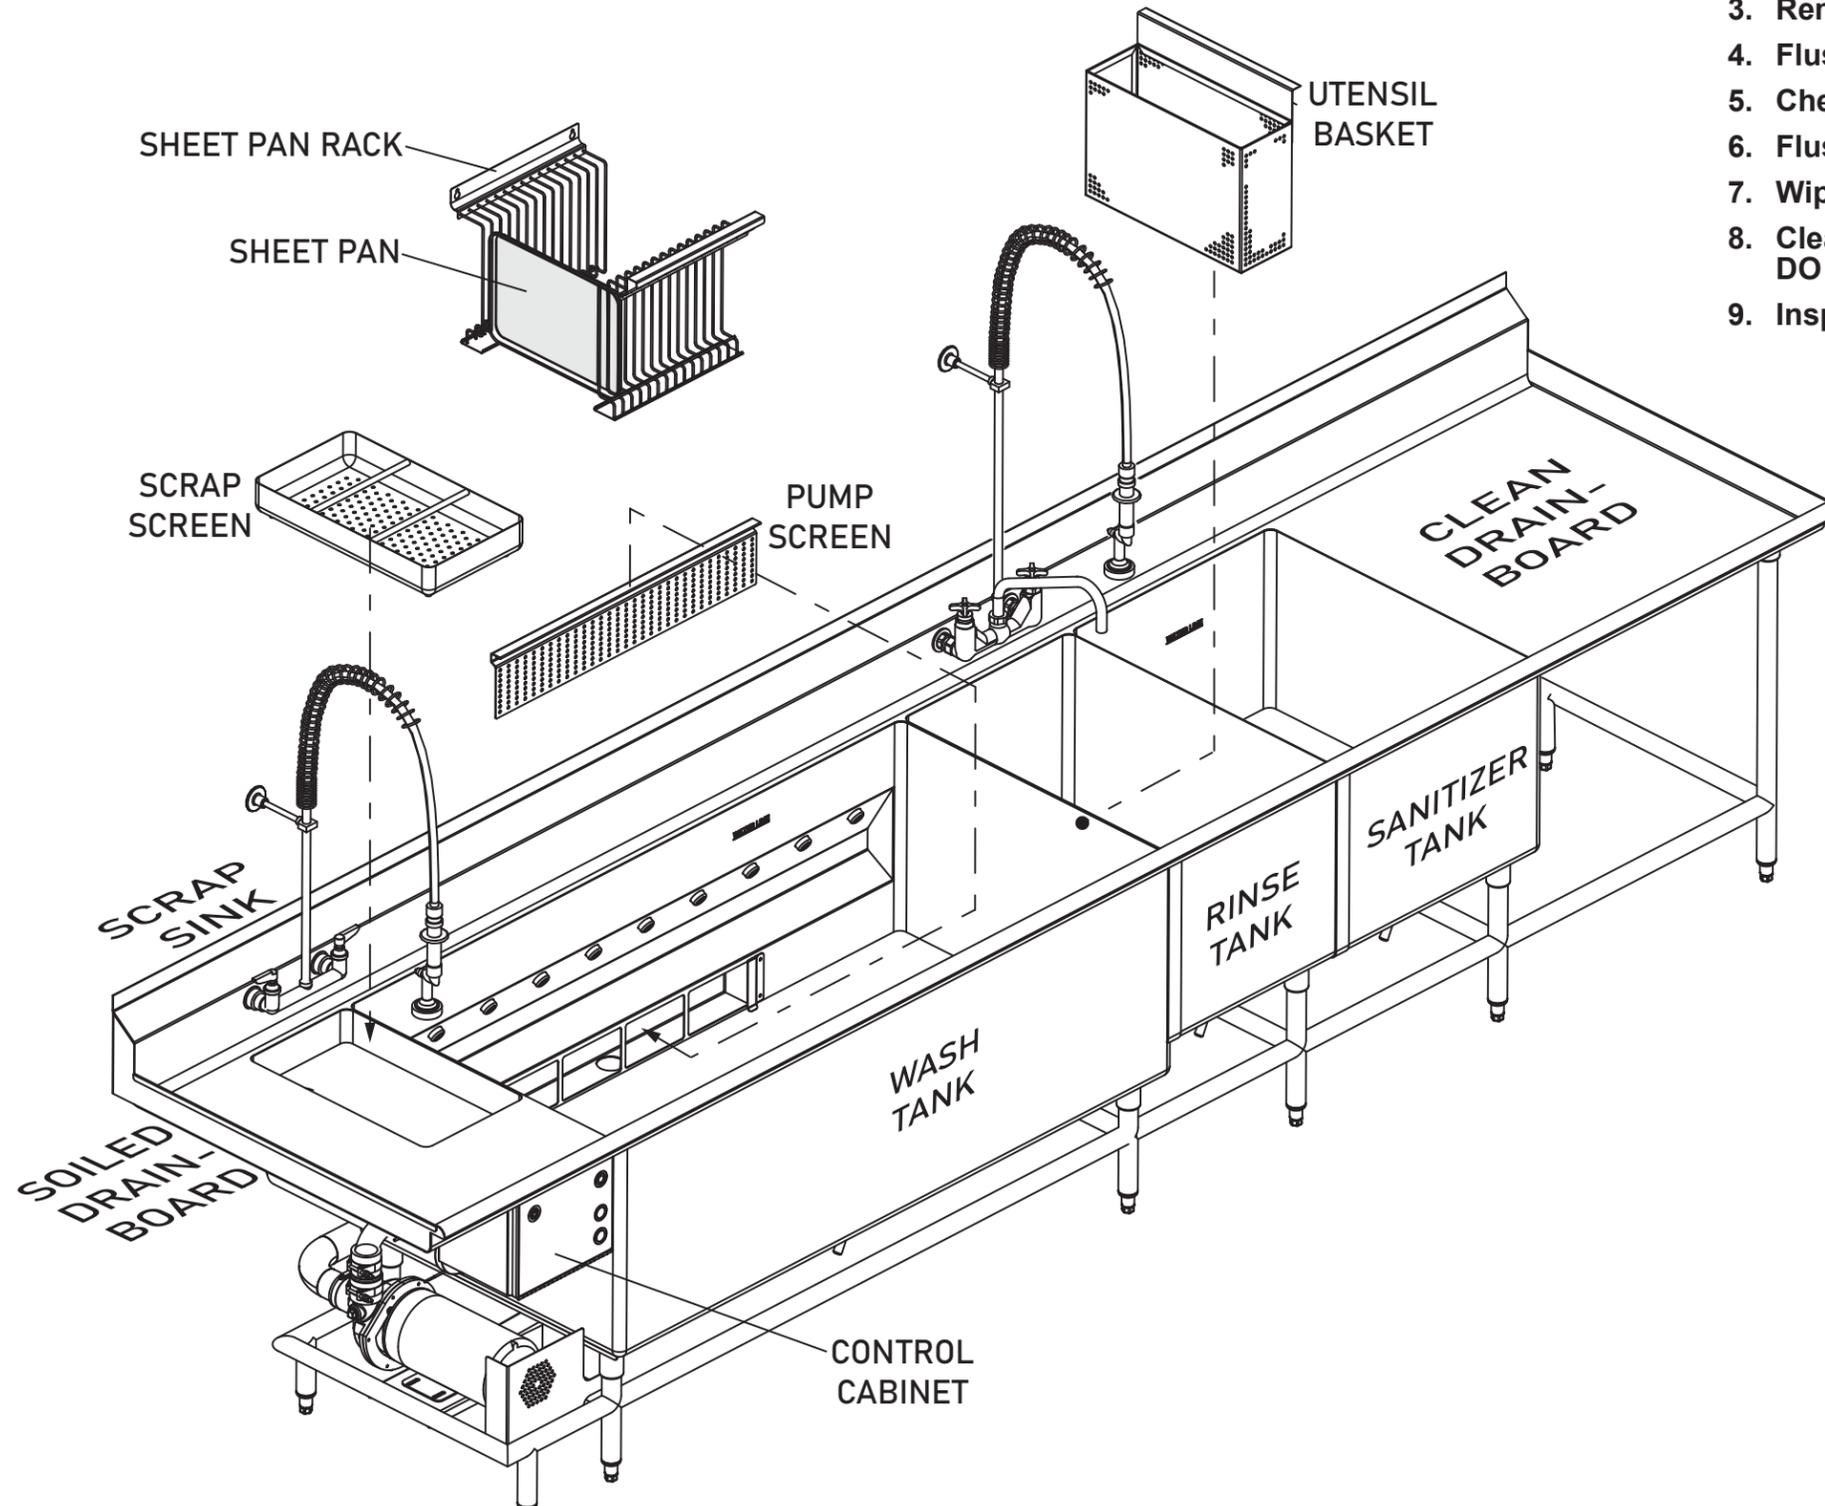

1. Turn machine power off.
2. Open all drains.
3. Remove wares left inside machine.
4. Flush debris from inside the machine and wipe with a clean cloth.
5. Check drains for debris. Clean drain screens.
6. Flush utensil basket, and scrap screen on back wall.
7. Wipe tank sensors with a clean soft cloth.
8. Clean the exterior of the machine with a mild detergent and soft cloth. **DO NOT HOSE WITH WATER.**
9. Inspect sheet pan racks for damage and replace if needed.